



SKU # 1001 358 793

Model # TY608-1511

USE AND CARE GUIDE

5 ft Snowman with Hat



THANK YOU

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 5 ft Snowman with Hat. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

Guarantee

What is Covered

The product is intended for residential seasonal use only. 90 days maximum per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

1-877-527-0313

 
HOMEACCENTSHOLIDAY.COM

Pre-Assembly

PLANNING ASSEMBLY

Carefully remove all the parts from the box, and place them on a flat surface. Read the entire manual prior to assembly, and identify all the parts included in the package against the parts list. If any parts are missing or damaged, do not attempt assembly, but contact our customer service center. Assembly of this product may require more than one person. Tools Required: Hammer, Pliers

PACKAGE CONTENTS

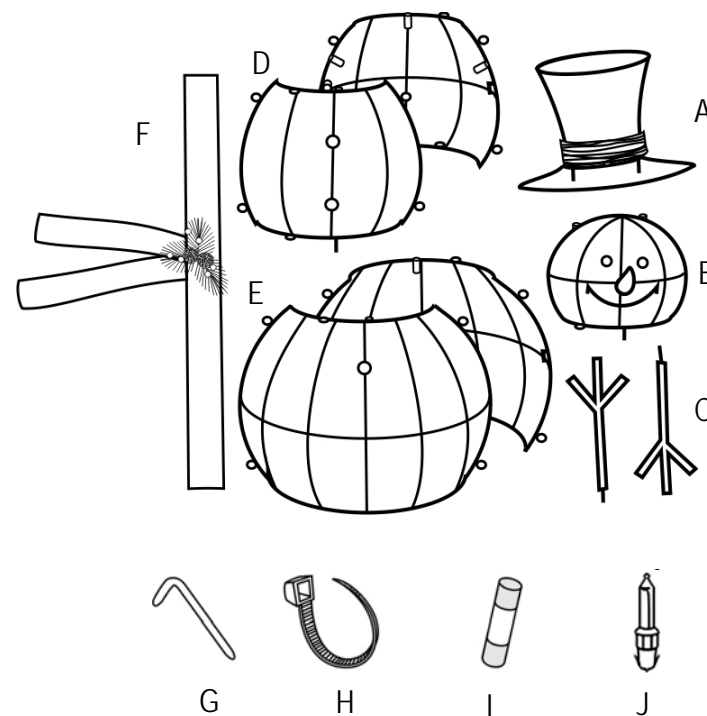

Package Contents/Parts List		
Part	Description	Quantity
A	Hat	1
B	Head	1
C	Arms/Hands	2
D	Halves of Upper Body	2
E	Halves of Lower Body	2

Package Contents/Parts List		
Part	Description	Quantity
F	Scarf	1
G	Ground Stakes	4
H	Plastic Ties	15
I	Fuse	2
J	Replacement Bulbs	7

Assembly

Assembling the Snowman

FIG.1


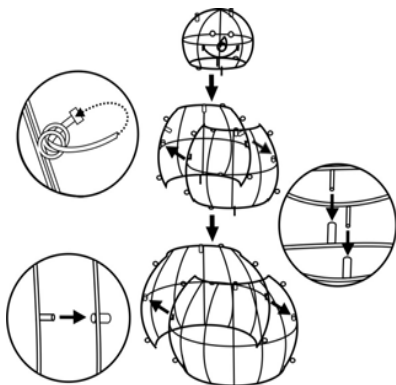 


FIG.2

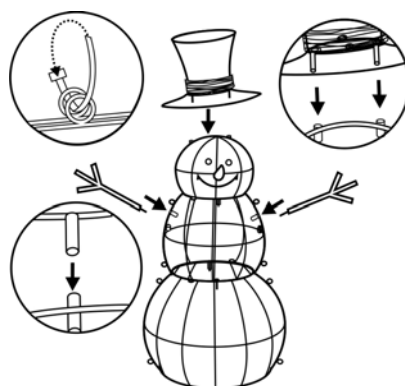 

Step 1. Align the two halves of the Lower Body (E) with each other and fasten with Plastic Ties (H). FIG.1

Step 2. Align the two halves of the Upper Body (D) with each other and fasten with Plastic Ties (H). FIG.1


Step 3. Stand the Lower Body (E) section in an upright position. Insert the metal rods attached to Upper Body (D) into the matching holes on the Lower Body and fasten with Plastic Ties (H). FIG.1

Step 4. Insert the rod of Head (B) into the matching holes on the Upper Body and fasten with Plastic Ties (H). FIG.1

Step 5. Insert the rods of each Arms/Hands (C) into the matching holes on Upper Body (D). FIG.2

Step 6. Insert the rod of Hat (A) into the matching hole on the Head (B). FIG.2

 FIG.3

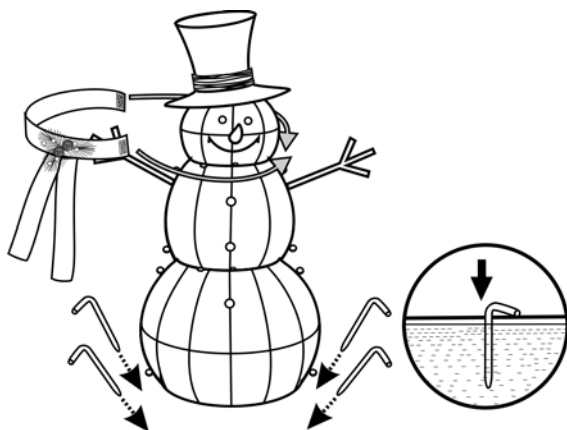

Step 7. Wrap the Scarf (F) around the neck of the Snowman. FIG.3

Step 8. Secure the Snowman to the ground using the Ground Stakes (G). FIG.3

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 102 Watts (0.85 Amps). Do not overload. Do not connect to another lighting string, decorative outfit, or other product. Before you use or re-use this product, inspect it carefully. Discard if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, or exposed copper wire.

Care and Cleaning

- Carefully remove the product from wherever it is placed, including trees, branches, or bushes. This helps to avoid any undue strain or stress on the product conductors, connections, and wires. If the product is placed on a tree, the tree should be well secure and stable.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

FOR INDOOR AND OUTDOOR USE